

Xtracycle FlightDeck LT2 Installation Guide

The FlightDeck LT2 is Xtracycle's newest and lightest deck. Made from glass reinforced plastic and bolted securely into the vertical racks, the FlightDeck is a strong platform for all your carrying needs.

Compatibility:

LT2 only - Requires LT2 V-Racks, RackLocks.

Tools Required: Metric hex wrench, 3mm	Parts Included: 4 M5x.8x35mm Button Head Bolts 4 M5x.8x15mm Button Head Bolts 8 small washers 4 thick washers 4 M5x.8mm Nyloc nuts
--	--



Note: The following instructions are for installation of the FlightDeck by itself, without a Hooptie LT2 or Yepp Seat Adapters.


If you are installing a Hooptie or Yepp Seat Adapter, some of the bolts provided may be replaced by those provided with those accessories. Always use the bolts suitable for the accessories to ensure compatibility, and refer to the instructions provided with each accessory for assembly details. Save the bolts from the deck in case you need to secure it after removing your accessories.

Note: To install a Yepp Seat Adapter, the appropriate port will need to be cut out of the deck. Using a sharp knife or a rotary tool, cut along the rectangular path to remove the blanking plate from the port. Use appropriate personal protection equipment for the tools and material. The edges may be rough, dress them with 100 grit sand paper, or cover the cut edges with GorillaTape.

Installation:


Before installing the FlightDeck, verify that the vertical racks are fully installed on the bike and secured with RackLocks.

Note: It is also easier to install the CarryAll bags before installing the deck.

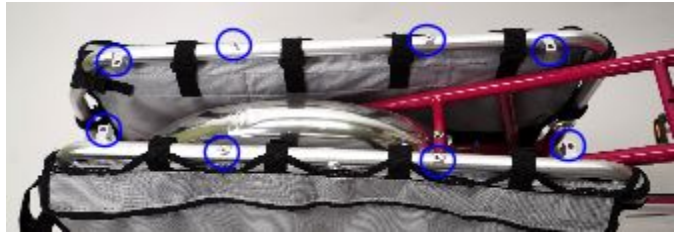

Place the FlightDeck on top of the V-racks with the logo side up and the wide end facing forwards.


- Line the 8 mounting holes on the FlightDeck with their corresponding mounting points on the V-Racks.

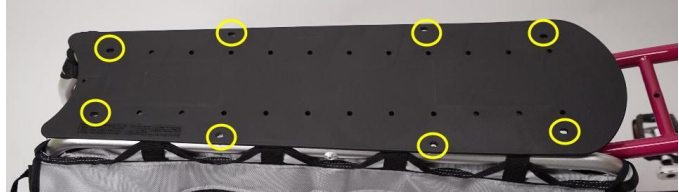

The holes at either end of the deck use the longer M5x35mm bolts.

- Insert one of the 35mm bolts into each hole with one small washer and one thick washer as shown.
- Thread a M5 Nyloc nut onto each bolt.

Note: No washer is needed under the nut; it will be captured by the notch in the underside of the block, and a washer will interfere with that fit.

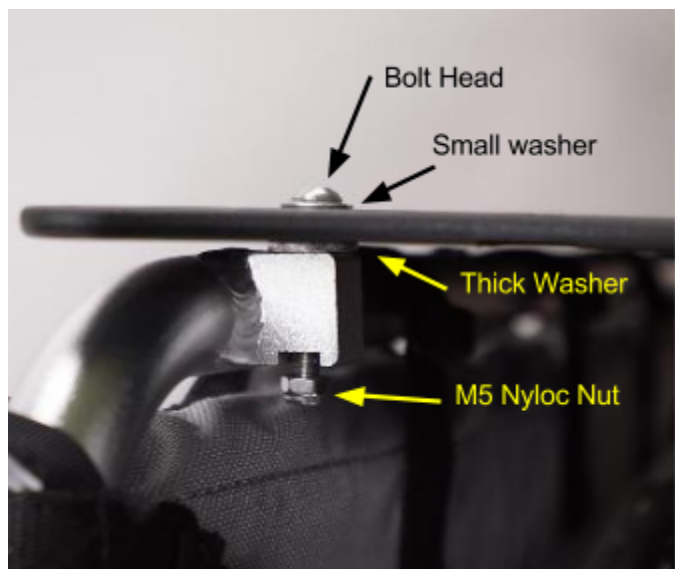

Thread the shorter 15mm bolts into the V-Rack bosses under the middle mounting holes.

- Use a small washer under the head of each bolt.



Once all bolts are installed, tighten the bolts to 3-4Nm.



WARNING: Never transport passengers without foot and hand protection in place, i.e. Yepp Seats/U-Tubes and CarryAll bags. Check that all fasteners are secure before riding the bike. Obey all posted weight limits. Failure to properly secure passenger and cargo carrying accessories may result in serious injury or death.

View the Xtracycle Owner's Manual at xtracycle.com/support for additional safety guidelines when riding with passengers or cargo.

Warranty

FlightDecks are guaranteed to be free from manufacturing defects for one (1) year from the original date of purchase. This warranty applies only to the original buyer and is not transferable. This warranty does not cover damage from use of this product outside of its intended range or that resulting from modification or neglect. It also does not cover wear and tear resulting from the normal use of the product. Please contact your Xtracycle dealer if you believe you have a warranty claim.