




FreeLoader & LongTail Kit

Load. Clip. Snug n' Roll.

The LongTail Kit is the multi-tool of cargo bike accessories. Bundling together racks, bags, and a deck, the LongTail Kit will handle most loads, small or large, long or bulky. Follow the instructions below to achieve maximum performance from your FreeLoader bags or LongTail Kit.

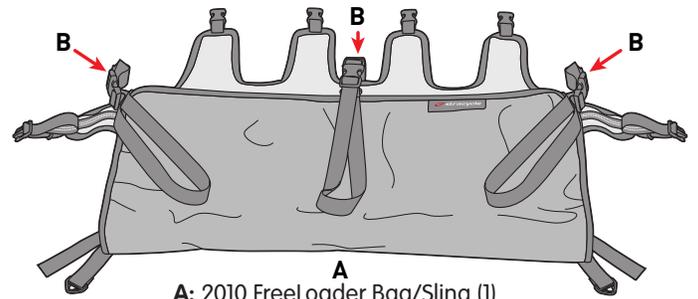

A: 2010 FreeLoader Bag/Sling (1)
B: Buckle Velcro Loops (3)


STEP 1 Hardware Installation

A properly tensioned FreeLoader bag is essential for enjoyable cargo carrying and minimizing bag interference with your rear wheel.

LongTail Kits require hardware to install properly.

Older LongTails require a Retrofit Kit to use the new bags, newer LongTails require the Hardware Kit.


Not here, silly, this is a fender mount!

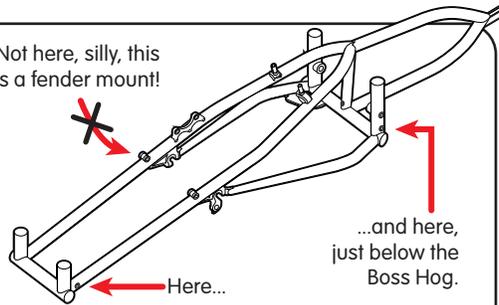

STEP 2A RetroFit Kit - Bare Tube


You may need to spread open the clamp for the front tube to clear the Boss Hog.

Place it as far down as it will go and install the bolt, mushroom & washer.

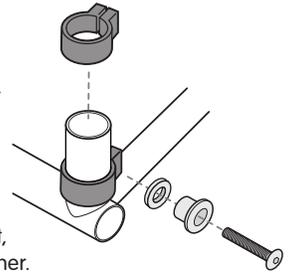


STEP 2B LongTail Hardware Kit Rack & Flush Mounts

Install the bolts and mushrooms into the four mounts on your Xtracycle frame and tighten snugly.

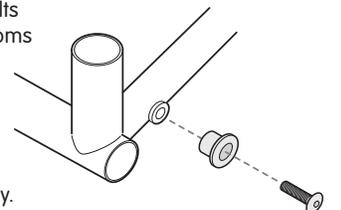


FreeRadicals Built Before Aug 2008 & 1st Generation Big Dummies

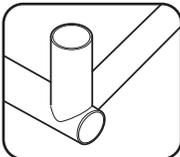

Bare Tubes

Frames or Big Dummies purchased before august 2008 require retrofit kit (part no. **2FR1100**) to work with 2007 FreeLoaders


RETROFIT KIT INCLUDES:

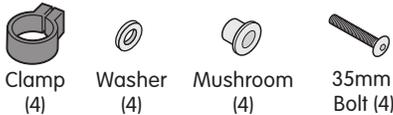


Clamp (4) Washer (4) Mushroom (4) 35mm Bolt (4)

Proceed to Step 2A

Most LongTails Built After Aug 2008

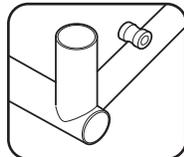


Rack Mount

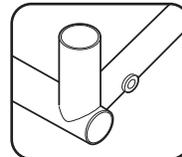

Flush Mount

HARDWARE KIT (2FR1200) INCLUDES:

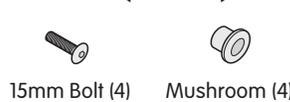


15mm Bolt (4) Mushroom (4)

Proceed to Step 2B

STEP 3


With V-racks or P-racks installed*, clip the four top buckles (A) followed by the two side buckles (B). Pull on the side straps tightly (C) to ensure a taught fit.

*Install Whatchamacollars w/ racks

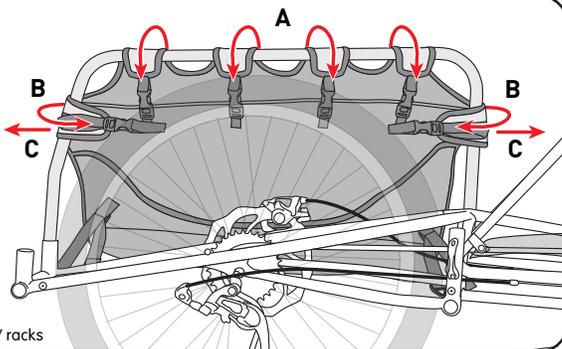


STEP 4

Snap the D-ring of the FreeLoader strap over the mushroom mount (A), then tighten the other end of the strap (B) pulling taught.

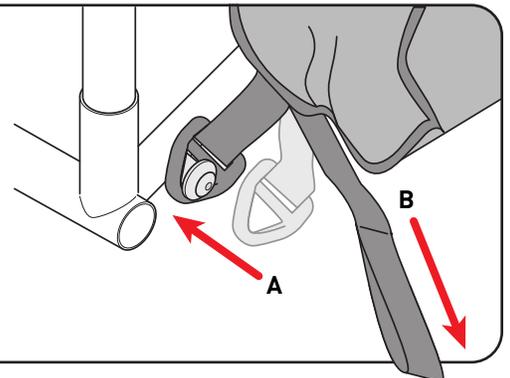

STEP 5

Attach rack buckle velcro loops to main rack rail as shown below.

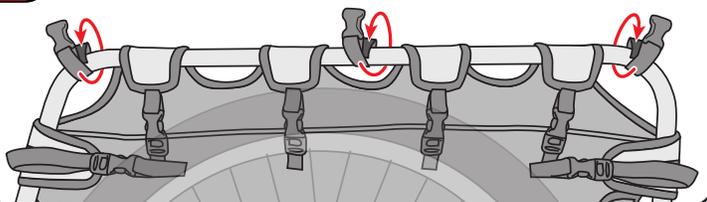

STEP 6


SnapDeck users, press the deck into place one side at a time. With one side in, push the deck with your thumbs while pulling the rack open with your fingers. Be careful not to pinch your fingers. The deck front should line up with rack front edge.

See FlightDeck instructions for install.

FlightDeck™ SUPERHOOKS™


Recycled, All-Weather, Practical.

Sturdy, strong and nearly indestructible, FlightDeck opens a world of possibilities. Made of 100% recycled HDPE (think milk jugs) plastic, this deck will last the life of your longtail. SuperHooks firmly clamp FlightDeck to your racks and multiple accessory* mounting holes open up a world of DIY/DIT possibilities.

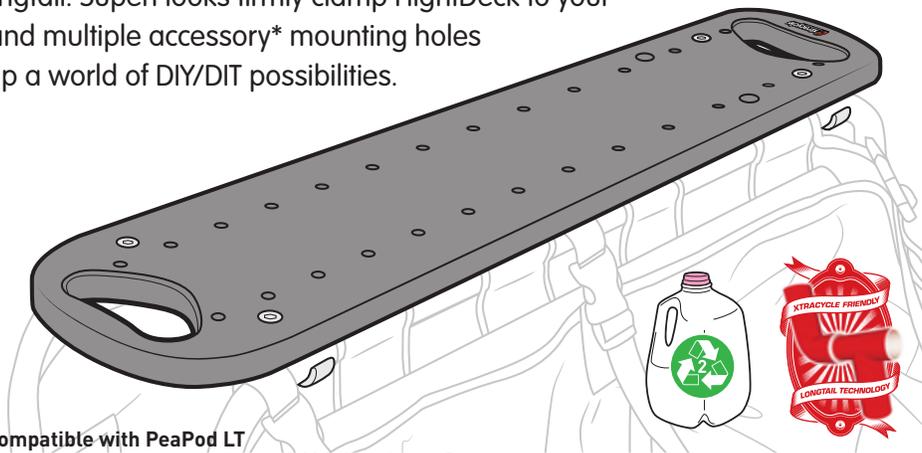

* Not compatible with PeaPod LT

The Bits 'n Pieces

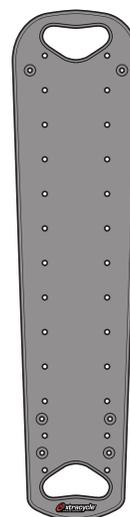

FlightDeck (1)



SuperHook (4)




40mm
Countersink
Bolt (4)

Tools Needed:


4mm Allen Key
CamStrap/Belt or
Helping Hand
(aka a Friend)

STEP 1

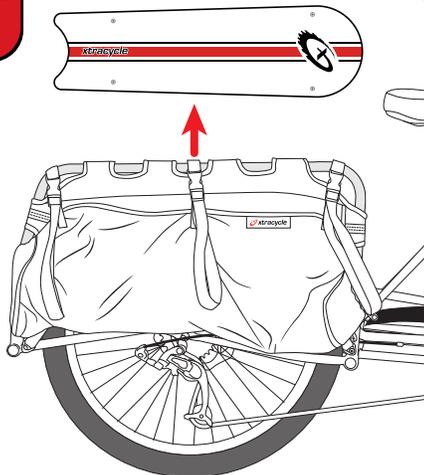

Remove existing deck from Xtracycle.
Ensure bags are fully installed on racks.


STEP 2

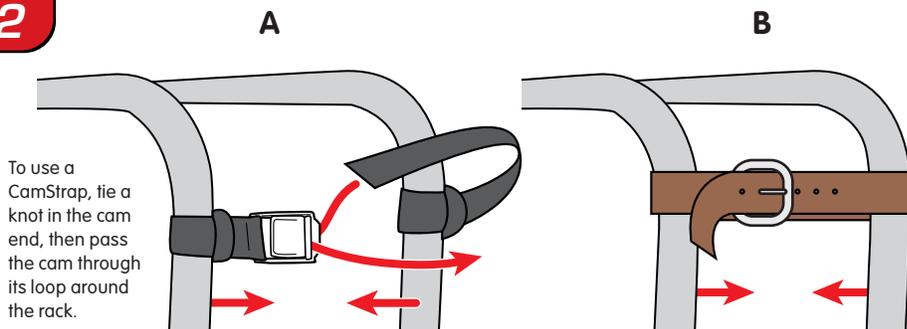

To use a CamStrap, tie a knot in the cam end, then pass the cam through its loop around the rack.


Before installing FlightDeck, it may help to pull your racks toward each other. A couple ways to do this are: **A** Use a CamStrap by tying a knot in the cam end, then wrapping the cam around one rack, passing through its loop end. Take the long strap and wrap around the other rack, passing through its loop end. Pass the long strap through the cam and tighten. **B** You may also use a belt/strap/rope to draw the racks toward each other. **C** Enlist a friend to help push the racks toward each other during **Step 4**.

STEP 3

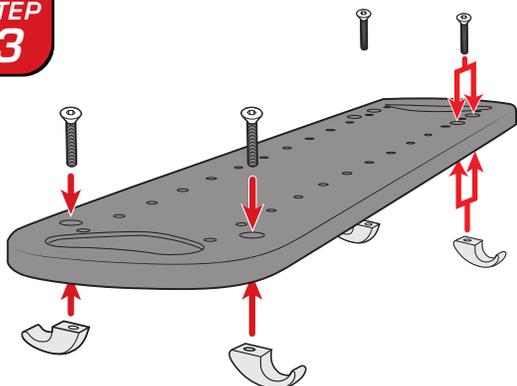

Install the four countersink bolts into the FlightDeck's countersunk holes. Screw bolts into SuperHooks a couple turns so that **they're on, but loose**. The forward hook positions have two options for install, but we recommend using the forward most holes.

STEP 4

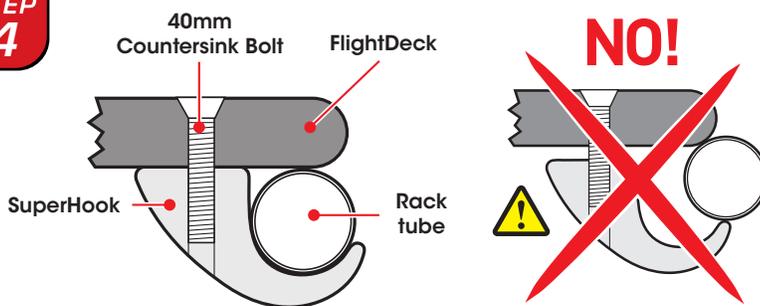

Place FlightDeck with SuperHooks on top of racks. Install one side at a time. Twist SuperHooks so that they are aligned with and snug to racks. Once SuperHooks are in proper place, tighten one side until firmly secure. With one side complete, repeat on other side. If the rack distance is too wide, refer to **Step 2** above to squeeze them together until SuperHooks are completely under the rack. Tighten SuperHooks bolts and remove CamStrap or belt when finished. **DO NOT pinch rack with SuperHook end.**